

## Setup screen pages



I like the following.

Map and Trip Computer are the most important.

Press “Add Page”


The Garmin will show you a list of screens.

Pressing the “back” button (top right), you can quickly cycle between these different pages.

# Cycle through GPS screens

Once the pages are setup, pressing the “back” button” (top right) will cycle you though the different pages


Main Menu

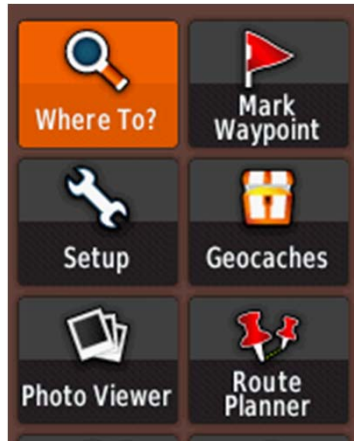


Compass




Map

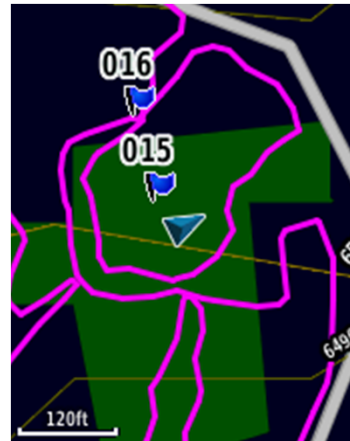


Satellite

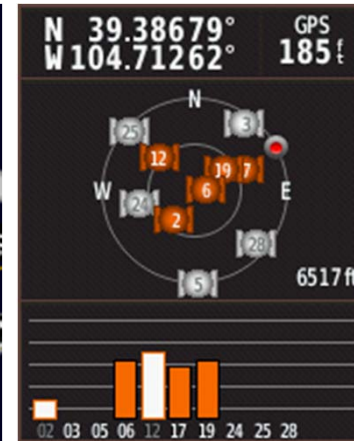

Track Manager

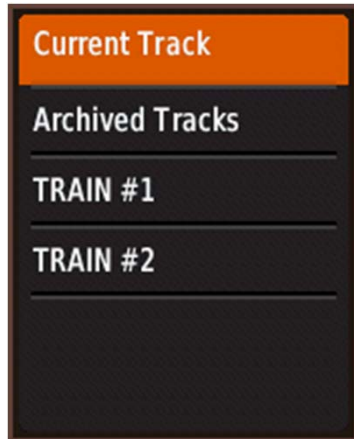

Trip Computer

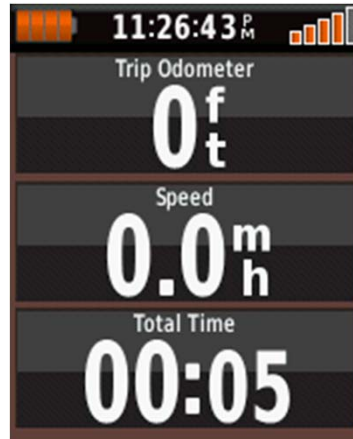

Waypoint Mgr.





## Timing Out



Press “Menu” button. Bottom left button.



The Garmin will show you a list of screens.

Press straight in on “toggle” button on GPS face to select Reset options.

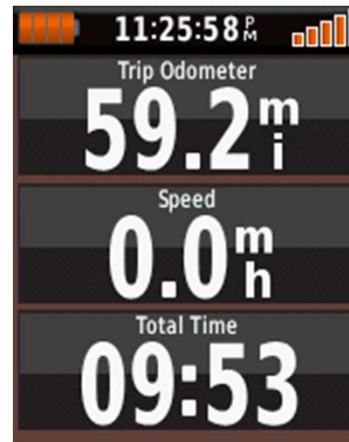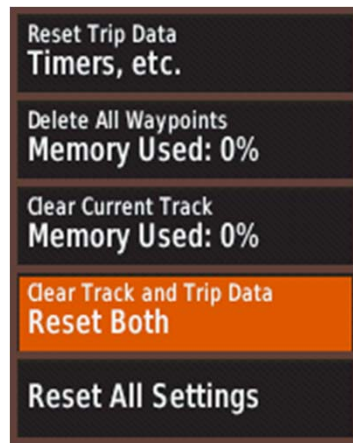

If you save breadcrumb data, ONLY “Reset Trip Data.”


Select ...

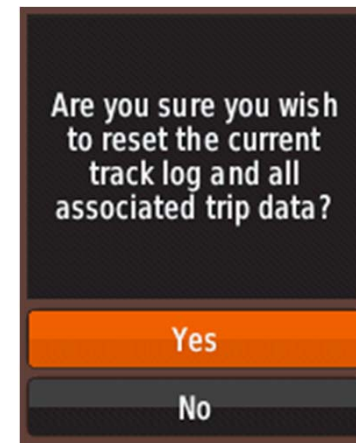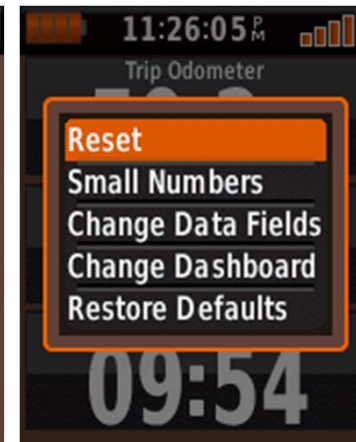

When you are ready to time out, select “Yes.” Press the Back button (top right) once and you will see a screen with all the trip computer information reset.

# Setup trip computer screen



Press the “back” button” (top right) until you get to the trip computer page:

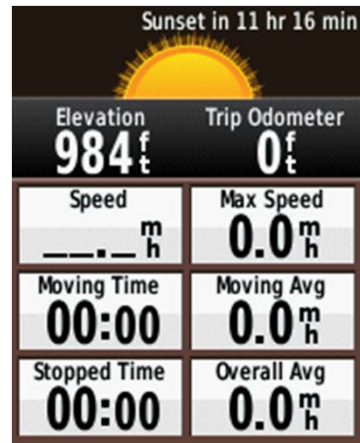

Press “Menu” button (middle of left side – bottom button)




I like big number on my screen.

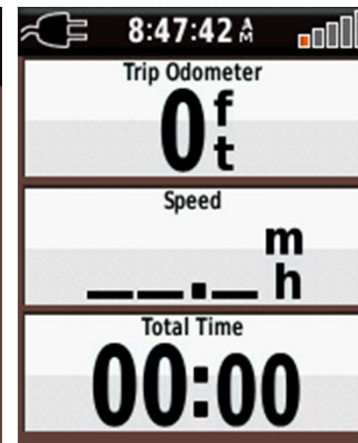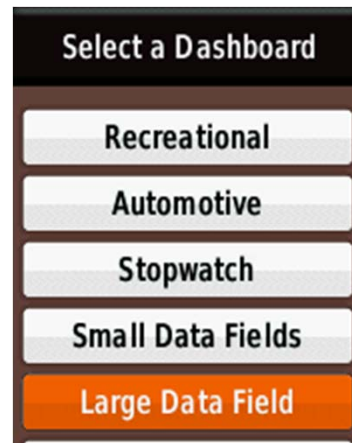

## Setup trip computer screen (cont.)

Change bottom display field from “Moving Time” to “Total Time.”

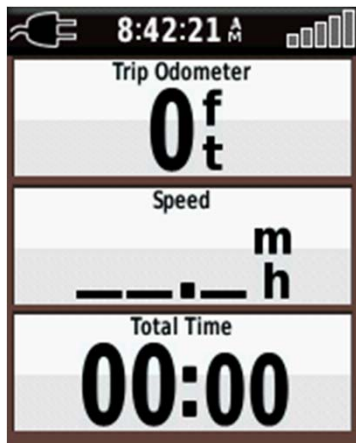

## Setup breadcrumb tracking detail



Change  
"Recording  
Interval" to  
"Most Often"

